


- Grease
- Sealant
- Grease + Sealant

Apply grease to the shaft,
and sealant to the threads

ITEM No.	DESCRIPTION	QTY.	PART NUMBER	TORQUE
1	LOWER LINK	1		
2	UPPER LINK - LEFT	1		
3	UPPER LINK - RIGHT	1		
4	BEARING,6901V-2RS	4	SET 1	
5	SPACER, 27mm	2	SET 4	
6	SPACER, 3mm	4	SET 4	
7	PIVOT AXLE, 70.5mm	2	SET 4	8Nm
8	TPER NUT	2	SET 4	
9	SPACER, 1mm	2	SET 4	
10	SCREW BOLT M6X25	2	SET 4	10Nm
11	BEARING, 6000-2RS	2	SET 1	
12	BEARING, 6900-2RS	2	SET 1	

ITEM No.	DESCRIPTION	QTY.	PART NUMBER	TORQUE
13	SCREW AXLE	1	SET 3	
14	PIVOT AXLE	2	SET 3	15Nm
15	AXLE NUT	2	SET 3	
16	PIVOT AXLE	2	SET 3	5Nm
17	SHOCK BOLT	2	SET 2	8Nm
18	HANGER M066	1	SET 5	
19	HANGER NUT	1	SET 5	4Nm
20	SCREW BOLT	1	SET 5	3Nm
21	SHOCK FENDER	1	099.14000	
22	FD HOLDER	1	099.17006	
23	SCREW BOLT M5X15	2		3Nm

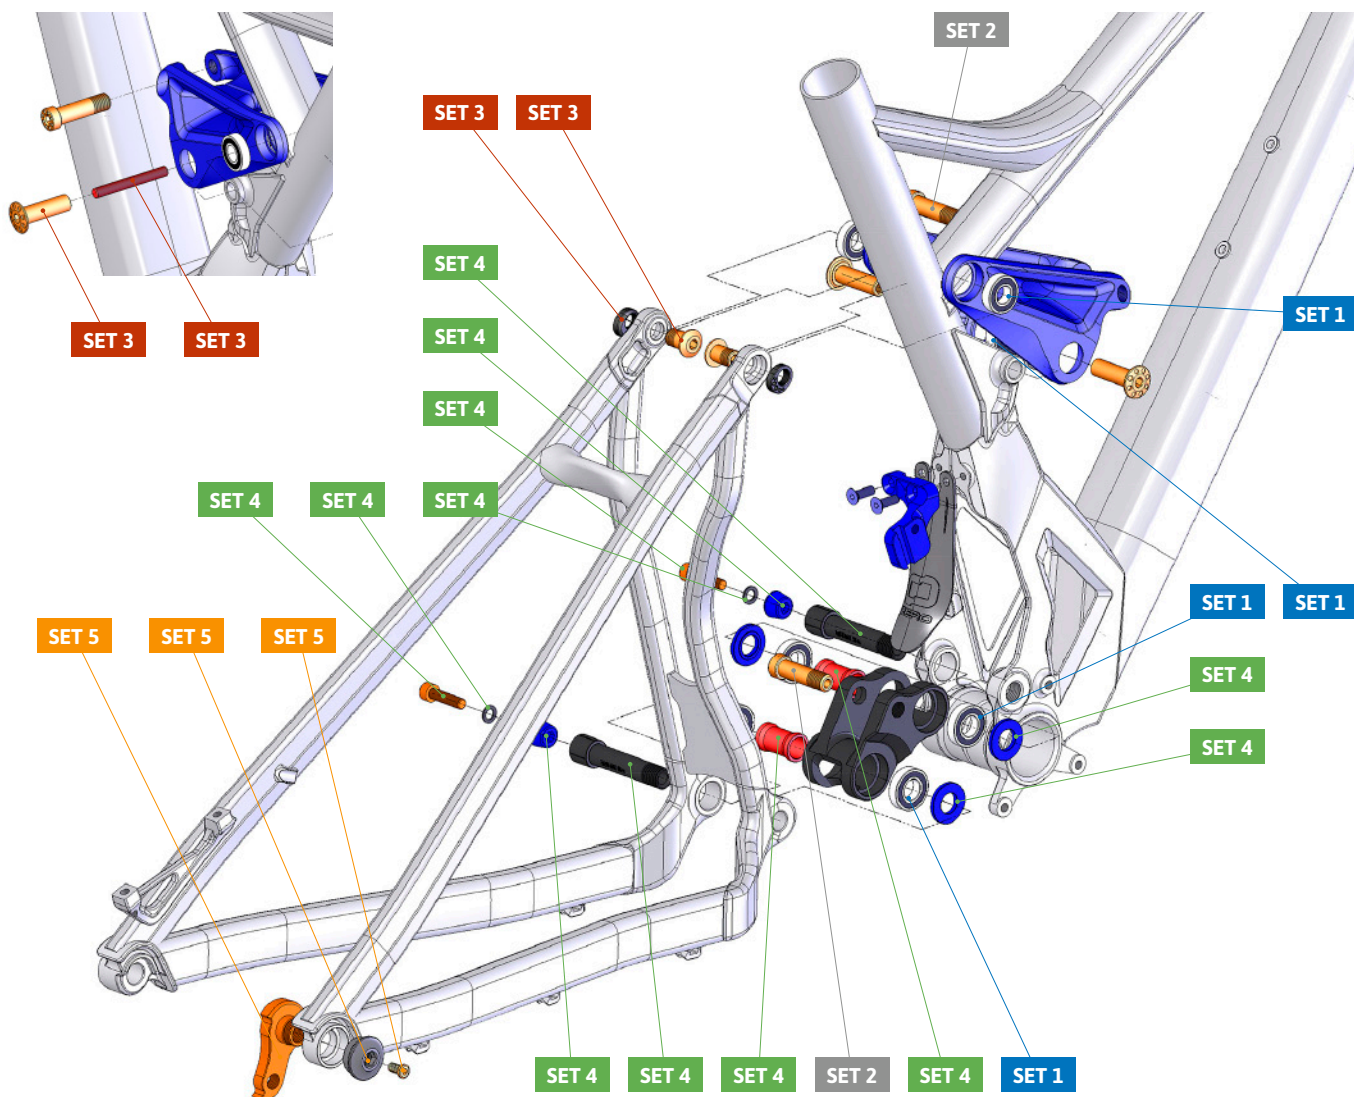

SET 1	SET 2	SET 3	SET 4	SET 5
ZERO BEARING KIT 12	SHOCK HARDWARE ZERO 1	UPPER LINK KIT 1	LOWER LINK KIT 18	HANGER M066 + NUT

PART NUMBER	DESCRIPTION	COMPONENTS
099.16111	SET 1: ZERO BEARING KIT 12	BEARING 6900-RS (INT. 10mm. EXT 22mm) (x2) / BEARING 6000-2RS (INT. 10mm. EXT 26mm) (x2) / BEARING 6901V-2RS (INT. 12mm. EXT 24mm) (x4)
099.12002	SET 2: SHOCK HARDWARE ZERO 1	BOLT M10x36 (x2)
099.12003	SET 3: UPPER LINK KIT 1	SCREW AXLE M6x40 (x1) / PIVOT AXLE D10x32 (x2) / AXLE NUT M10x5,75 (x2) / PIVOT AXLE M10x15 (x2)
099.16113	SET 4: LOWER LINK KIT 18	SPACER D16xD12x27 (x2) / SPACER D23.5xD12x3mm (x4) / PIVOT AXLE M12X70.5mm (x2) / SPACER D10XD6X1mm (x2) / TAPER NUT 10.5mm (x2) M6x25L-P-S SCREW BOLT (x2)
099.00053	SET 5: HANGER M066 + NUT	HANGER M066 (x1) / HANGER NUT (x1) / SCREW BOLT (x1)