



- Grease
- Threadlocker
- Grease + Threadlocker

Apply grease to the shaft, and locker to the threads

ITEM No.	DESCRIPTION	QTY.	PART NUMBER	TORQUE
1	FRAME	1		
2	HANGER	1	SET 1	
3	HANGER NUT	1	SET 1	4Nm
4	CABLE RUBBER	1	989.13010	
5	CHARGER PLUG	1	099.20019	
6	SCREW BOLT	9	099.20021	3Nm
7	CHARGER COVER	1	099.20020	
8	BOLT COVER	2	099.18019	5Nm
9	CABLE GUIDE	1		

ITEM No.	DESCRIPTION	QTY.	PART NUMBER	TORQUE
10	MOTOR COVER, LEFT	1	099.20022	
11	MOTOR COVER, RIGHT	1	099.20023	
12	MOTOR COVER, LOWER	1	099.20024	
13	SCREW BOLT M4x10	4	099.15032	4Nm
14	SCREW BOLT M6x10	1	099.20026	4Nm
15	BATTERY COVER	1		
16	SCREW BOLT	4	SET 2	3Nm
17	NUT	4	SET 2	
18	SPACER	4	SET 2	

PART NUMBER	DESCRIPTION	COMPONENTS
099.00055	SET 1: HANGER M068 + NUT	HANGER (x1) / HANGER NUT (x1)
099.20027	SET 2: BATTERY COVER BOLTS + NUTS	SCREW BOLT (x4) / NUT (x4) / SPACER (x4)
124.20400	ROTOR MAGNET SPEED SENSOR BOSCH	
112.90022	REAR AXLE	12X148 P1.75 L180