



- Grease
- Threadlocker
- Grease + Threadlocker

Apply grease to the shaft, and locker to the threads

ITEM No.	DESCRIPTION	QTY.	PART NUMBER	TORQUE
1	FRAME	1		
2	HANGER	1	SET 1	
3	HANGER NUT	1	SET 1	4Nm
4	CABLE GUIDE	2	SET 2	
5	SCREW BLOT M3x8	2	SET 2	3Nm
6	CABLE RUBBER	1	989.13010	
7	BATTERY BRACKET	2	SET 3	
8	BATTERY BRACKET	2	SET 3	

ITEM No.	DESCRIPTION	QTY.	PART NUMBER	TORQUE
9	SCREW BOLT M5x20	4	SET 3	5Nm
10	MOTOR BRACKET	1	099.20044	
11	MOTOR BOLTS T40x18	8	099.20031	40Nm
12	MOTOR COVER	1	099.20028	
13	SCREW BOLT M4x10	4	099.15032	4Nm
14	SCREW BOLT	1	099.20034	4Nm
15	RUBBER COVER	1	099.20030	

PART NUMBER	DESCRIPTION	COMPONENTS
099.00055	SET 1: HANGER M068 + NUT	HANGER (x1) / HANGER NUT (x1)
099.19010	SET 2: CABLE GUIDE KIT 3	CABLE GUIDE (x1) / SCREW BOLT (x1)
099.20029	SET 3: BATTERY BRACKET KIT 1	BATTERY BRACKET (x1) / BATTERY BRACKET (1) / SCREW BOLT (x2)
124.20401	ROTOR MAGNET SPEED SENSOR SHIMANO	
112.90022	REAR AXLE	12X148 P1.75 L180