


PRIME + / 29

Spare Parts

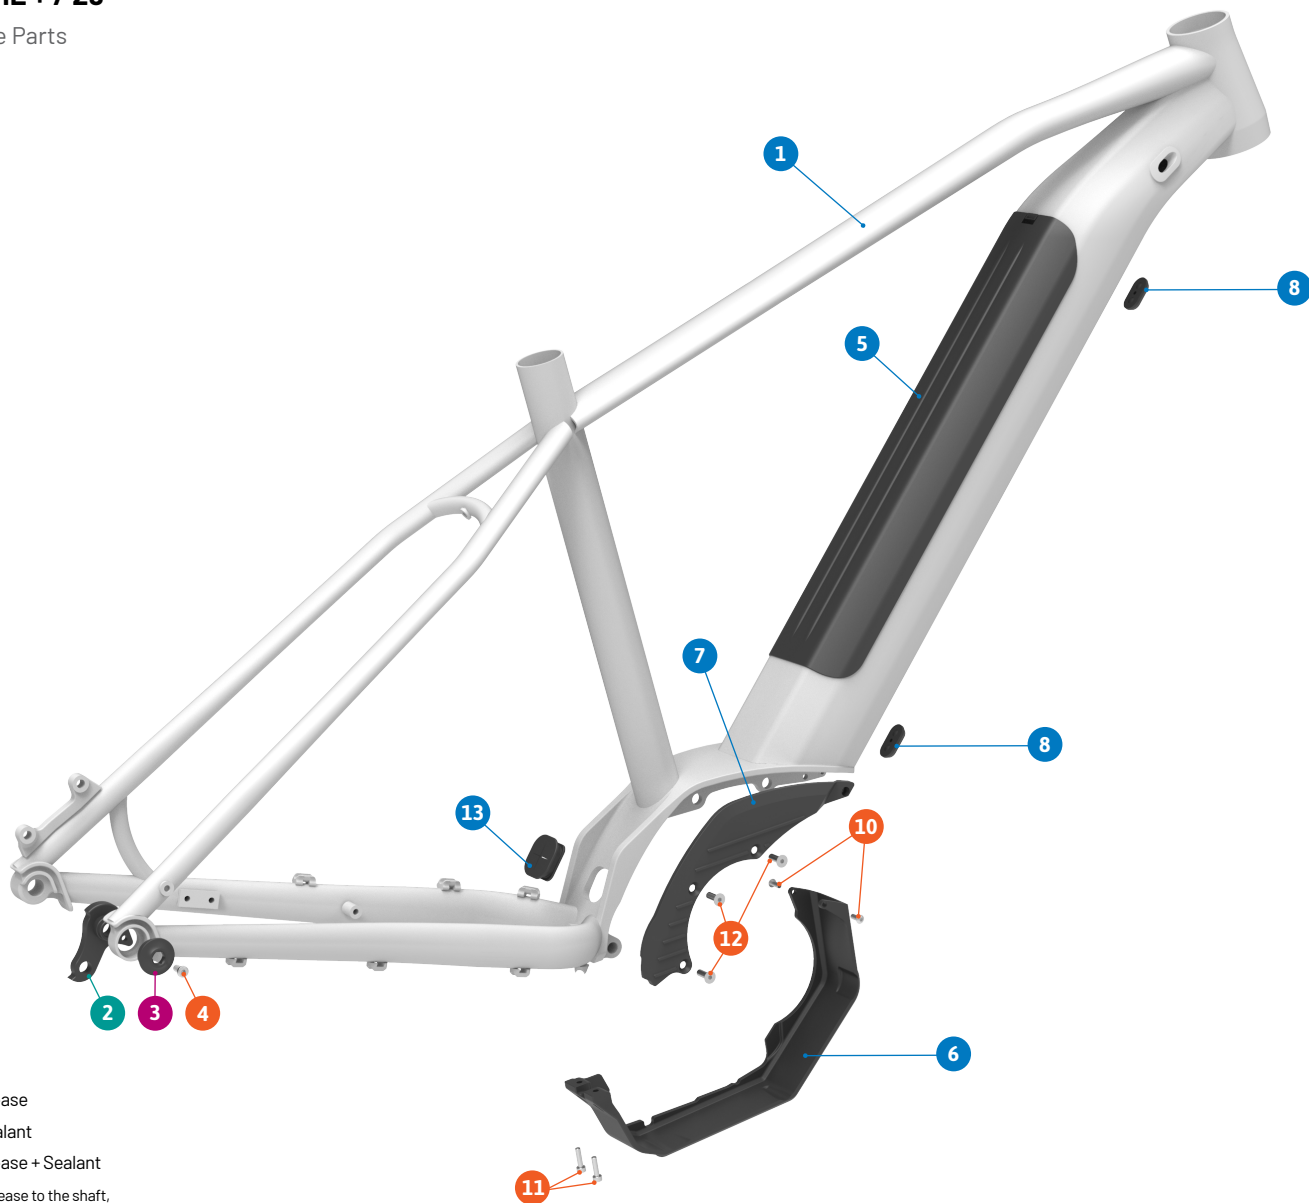

- Grease
- Sealant
- Grease + Sealant

Apply grease to the shaft, and sealant to the threads

ITEM No.	DESCRIPTION	QTY.	PART NUMBER	TORQUE
1	FRAME	1		
2	HANGER	1	SET 1	
3	HANGER NUT	1	099.16011	
4	SCREW BOLT	1	SET 1	3Nm
5	BATTERY COVER	1	099.18016	
6	MOTOR COVER	1	099.16013	
7	RIGHT SIDE COVER	1	099.16017	
8	BOLT COVER	2	099.18019	
9	CABLE ADAPTOR	1		
10	SCREW BOLT M4x10	2		3Nm
11	SCREW BOLT M4x15	2		4Nm
12	SCREW BOLT M5x15	3		3Nm
13	CABLE COVER	1	099.16014	



PART NUMBER	DESCRIPTION	COMPONENTS
099.00053	SET 1: HANGER M066	HANGER M066 (x1) / HANGER NUT (x1) / SCREW BOLT (x1)
112.90022	REAR AXLE	12X148 P1.75 L180